


Model: Powakaddy Compact C2 - Instructions to Replace Front Wheel Assembly Release Handle



Part number: 01185 Front Wheel Release Handle

Kit number: 01391-01-03 Compact C2 Front Wheel Release Handle Kit

Tools required: No. 2 Pozidriv Screwdriver

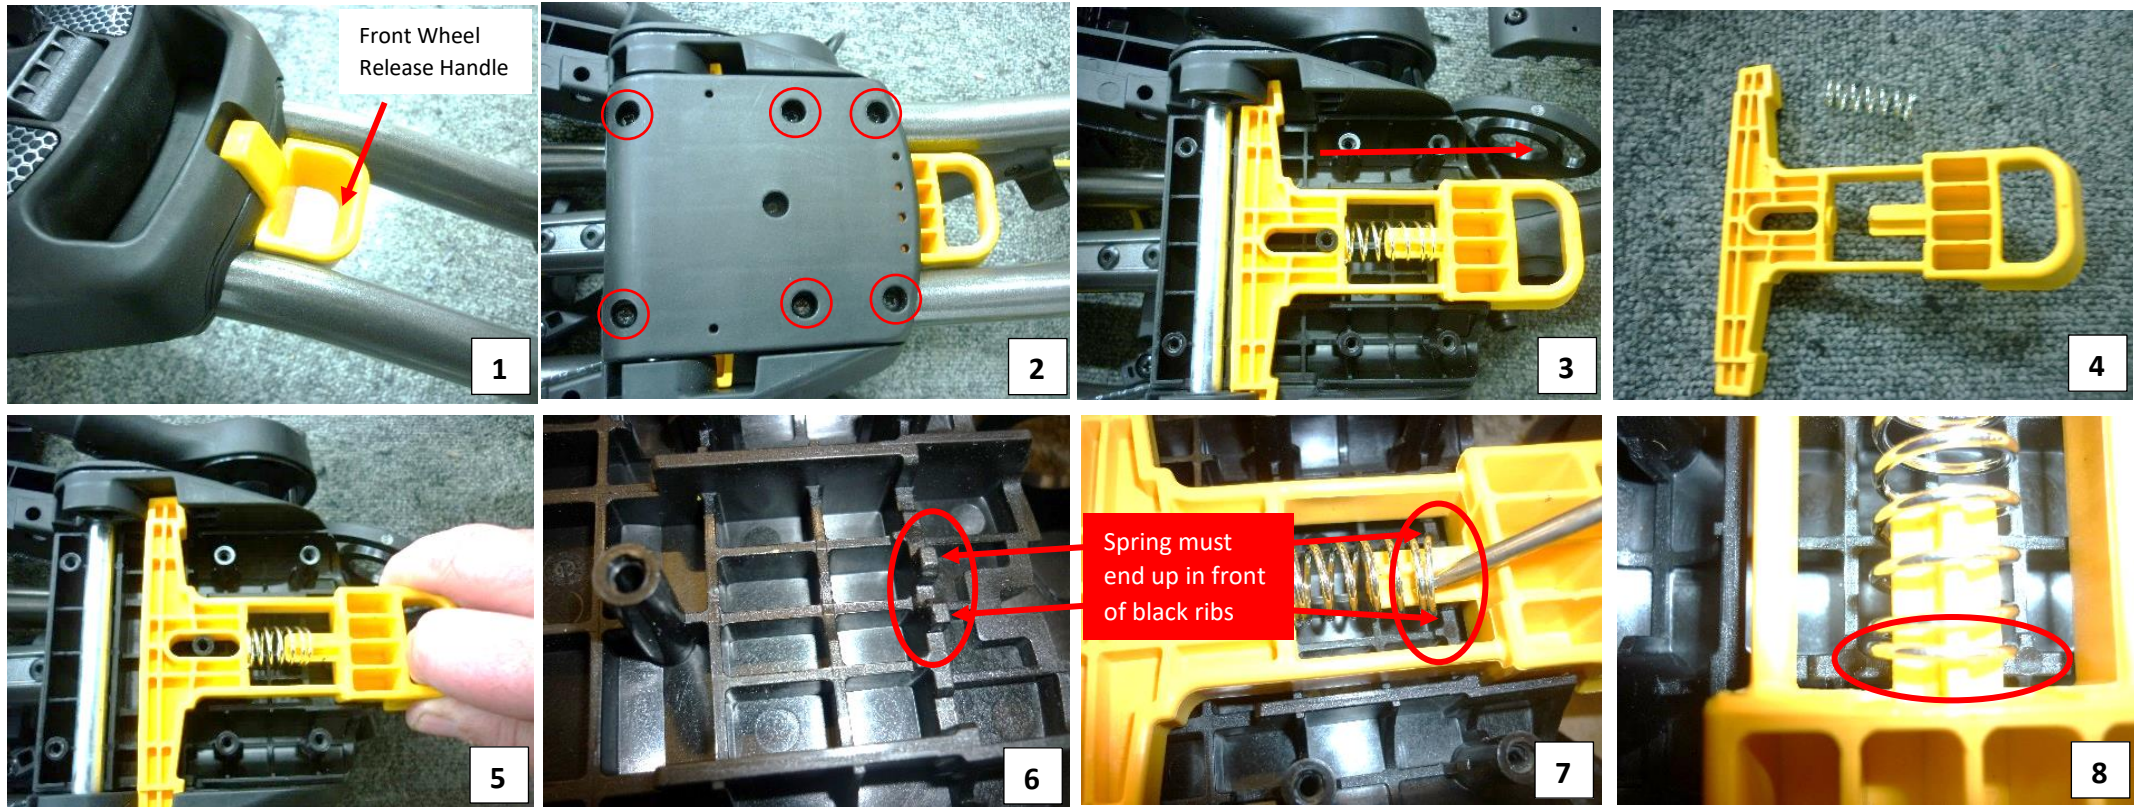

Replacement Instructions:

- Front Wheel Assembly Release Handle. Fig 1.
- Remove and retain 6 x Pozidriv screws using a size No.2 Pozidriv Screwdriver. Fig 2.
- Separate the upper and lower housings. Fig 3.
- Pull the yellow handle in the direction of the arrow so that the lugs clear the upper housing and remove. Remove the spring and refit to the lug of the new yellow handle. Fig 3 & 4.
- Fit the new yellow handle to the upper housing. Fig 5.
- Take special note of fig 6, 7 & 8. Position the spring to the L/H side of the two ribs of the upper housing.
If the spring is not in the correct position the handle will not move sufficiently and will not release the front wheel assembly.
- Refit the lower housing and secure with the 6 x Pozidriv screws removed earlier.

If you should require any further information please visit www.powakaddy.com/support or call our technical support hotline on +44 (0) 1795 473555 where a member of our team will be happy to assist.