

# Low Profile Tyre Change

When one of the low profile sports tyres from the Stadel Dawman range has worn, please follow the instructions below for replacing the tyre—approx. 3 minute job!!




Before commencing you will need a knife, a phillips screw driver, a replacement tyre, a damp cloth and any item that will allow you to balance the centre on a higher plane to enable the tyre to be pressed on!

1



Remove the screws from the back of the tyre

2

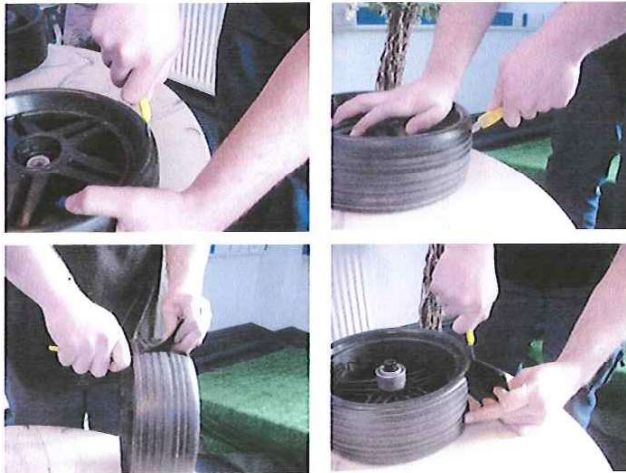

Remove the tyre by slicing along the split section of the tyre, cut down the tread of the tyre and back along the other side wall to allow you to open up the tyre.

3



Cut through the tyre to the edges of the wheel hub and score a line with the knife through the tyre wall against the hub. This will then pull apart.

4



Prepare the wheel centre for fitting the new tyre by removing any dirt which may have collected on the hub.



Ensure the tyre is smooth inside. This may require the inside joint line of the moulding to be trimmed if it has not already been trimmed, as this will prevent the tyre snapping to the wheel centre.

5



When ready to fit the tyre leave the outside of the hub wet to allow the tyre to slip over more easily.



Set the hub onto a raised plane that will allow the tyre to press the whole way on.

Place the tyre over the wheel and press down firmly until the tyre snaps on to the rim. If possible warm the tyre slightly as this will help you to fit the tyre more easily.

6



Once fitted as shown, turn the wheel centre over and insert the screws at an angle of approximately 30 degrees to ensure the screws go into the tyres. Do not insert the screws in straight as this will cause the screws to slide down the inside of the tyre and distort the assembly and the screws will not have screwed into the tyre.

7



The tyre is now fitted and complete.

**You may now enjoy many more miles on the fairway!**