


Torberry / Anderson connector assembly instructions

Step 1

1. Strip 9mm insulation off the end of the wires you are working on.
2. Crimp the contacts onto the 2 wires trying not to flatten the contacts too much (or they mightn't fit into the housings)

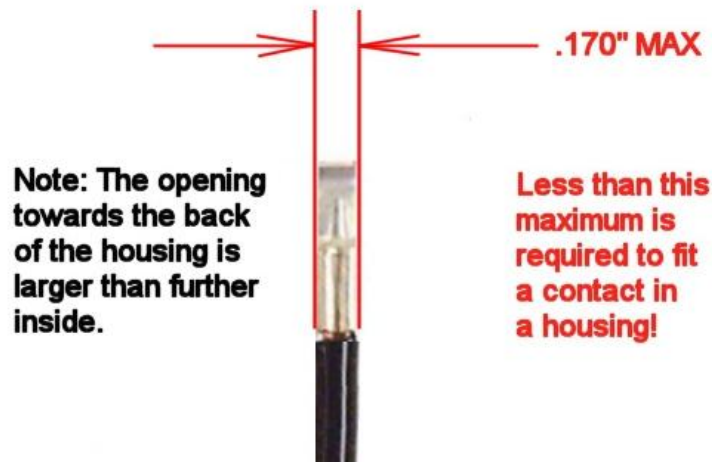

Step 2

1. Assemble the red and black housings together by sliding one down and the other up – as you can see they can be set up in various combinations – pay special attention that you set them up in exactly the same way as the connector you want to connect to.



Step 3

1. Push each terminal into the corresponding housing (as shown in the cut away view below) until you hear a 'click'. If you have trouble pushing the terminals all the way home it may be because they have been flattened too much when crimping – in this case use a pair of pliers to reshape them.



If you have any queries or questions please feel free to contact us:

Email – info@lambeggolshop.com

Tel: 028 9266 2738